


PocketQuad V1.1 Bootloader flash


Some Models of the PocketQuad need an update of the Bootloader. This Bootloader can't be flashed by the integrated USB connection. To Flash a new Bootloader you need a Programmer like the USBasp from Hobbyking.

Bootloader flash

1. Make a connection between the USBasp and the PocketQuad Board. For this you need to build an adapter cable.

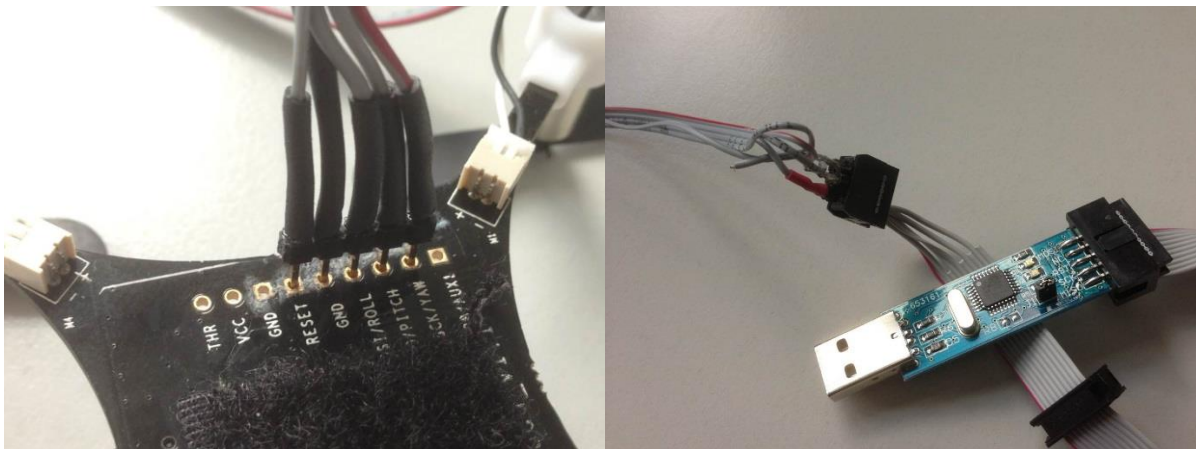


The 6-pin connector of the USBasp has the following pin assignment. The Pins you need to connect are also marked on the PocketQuad Board. Warning VCC is not required!

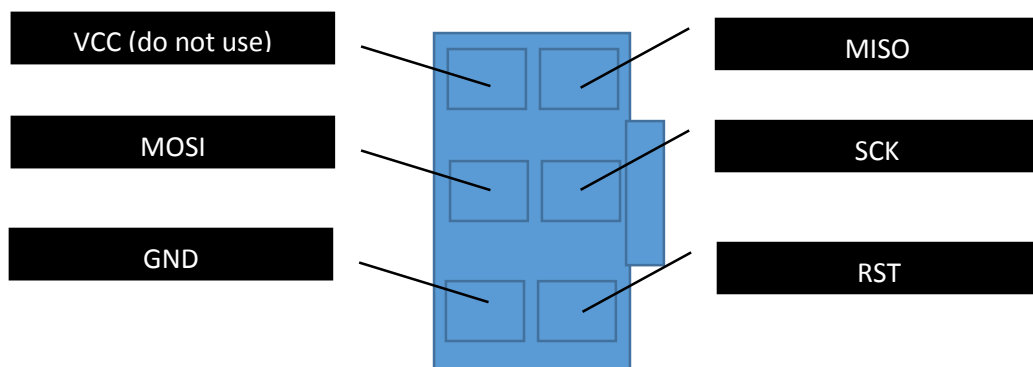


2. If the USBasp is connected with the Pocket Quad, you only need to be connected the battery. Now start the Arduino software. Warning disconnect the receiver during you flash the bootloader!!!!!!

3. Choose Boardtyp, Arduino Leonardo.

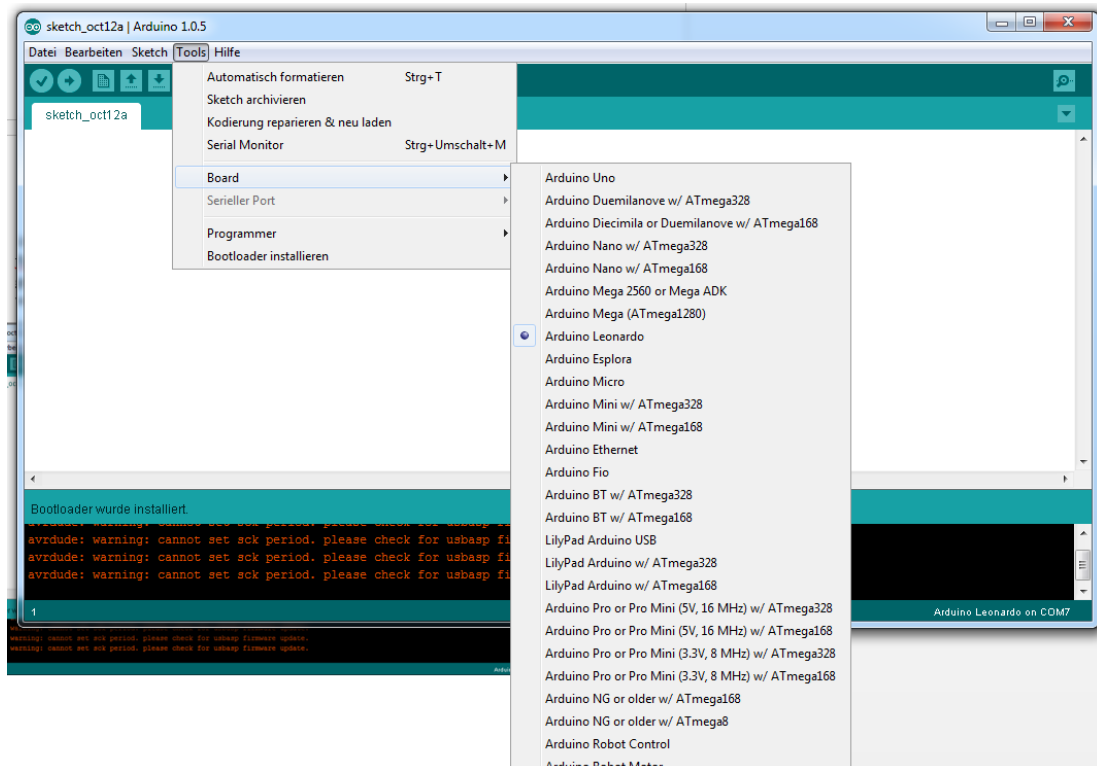

4. Choose Programmer USBasp.

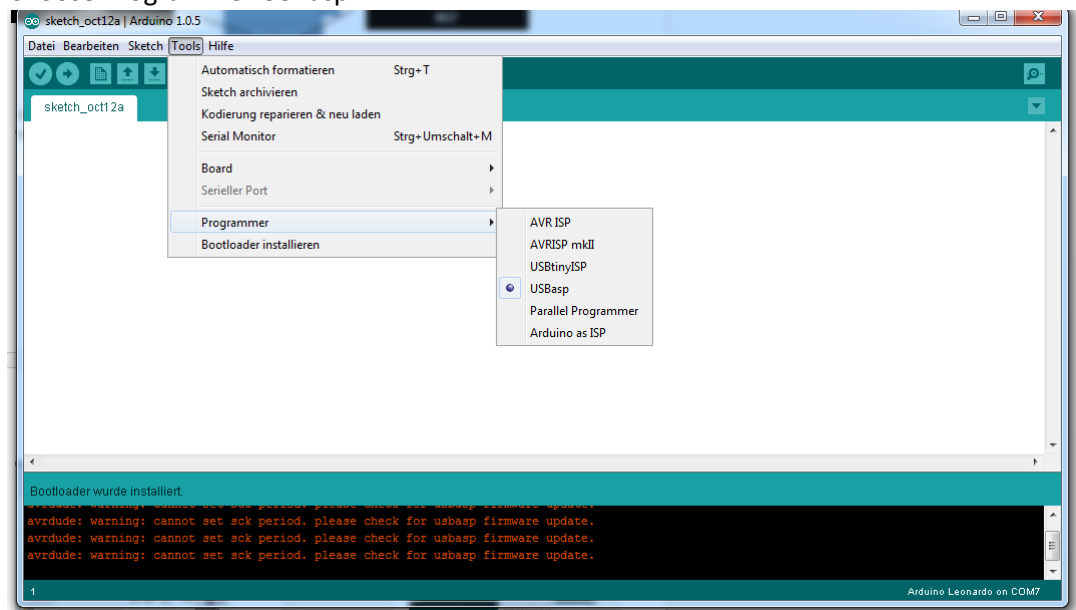

5. Choose under the Tools tab „install Bootlader“, this starts the upload. This may takes several minutes. After the upload you can use the integrated USB-Port to upload new Code to your PocketQuad. (New code to bind the receiver, for example).

