

Thank you for purchasing a Hacker Electronic Speed Controller. This product was developed in close co-operation with JETI and incorporates the latest technological developments. You have got a very efficient Controller for brushless sensorless motors use. Our priority was reliability and simple Setup by transmitter use.

In fact all parameters can be independently changed by using our Prog-Box (programming box). By using this device you will accede to the total programming possibilities of our new Controller-Line.

Even if programming sequences of *MASTER*-Speed Controllers are particularly logical and therefore very easy, using and operating requires some knowledge and a few basic skills. Please read through these instructions sheets in its entirety before attempting to operate with these electronic devices.

We strongly recommend getting particularly close attention to our safety instructions.

We wish you joy and a lot of success with your new *MASTER* Speed Controller.

Table of contents

	Page
1. Safety and operating instructions	3
2. Limitation of liability	5
3. Product description	5
4. Connections and controls	6
4.1 <i>MASTER</i> -Flight /-F5 /-Acro /-Heli /-Navy Versions	6
4.2 <i>MASTER</i> -Car Versions	6
5. Initial Setup of <i>MASTER</i>-Speed Controllers	7
5.1 <i>MASTER</i> -Flight/-F5/-Acro -Versions	7
5.2 <i>MASTER</i> -Heli Versions	8
5.3 <i>MASTER</i> -Navy Versions	9
5.4 <i>MASTER</i> -Car Versions	10
6. Transmitter Setup of <i>MASTER</i>-Speed Controllers	11
6.1 Fundamental proceeding	11
6.2 Mode Setup	11
6.3 Timing Setup	13
6.4 Switch frequency settings	14
6.5 Current limitation settings of Car Controllers	15
7. <i>MASTER</i>-Speed Controller Setup by Prog-box	16
8. Declaration of conformity	17
9. Protection features	17
10. Warranty	17
A. Appendix	18
A-1 <i>MASTER</i> -Speed Controller: Technical Data	18
A-2 <i>MASTER</i> -Speed Controller: <i>BEC</i> -Capacities	19
A-3 <i>MASTER</i> -Prog-Box: Setup Features	20
A-4 <i>MASTER</i> -Prog-Box: Menu Features	21

1. Safety and operating instructions

Building and operating of RC-models requires technical knowledge by careful and safety handling. Inaccurate assemblage as well as carelessness using can result in significant property and/or personal injuries. For these reasons build correctly, and care about the operating instructions, when mounting and operating a model with Speed Controllers.

The CE sign guarantees the observance of legal rules for undisturbed operations; however it does not entitle you to a careless Controller use. *MASTER-Speed Controllers* are developed exclusively for RC model applications. Under any circumstances *MASTER-Speed Controllers* may **not be used in any man-carrying aircrafts** or any other man-carrying vehicles.

MASTER-Speed Controllers are designed for exclusive operating with batteries. Never use Speed Controllers by connecting to a power supply, when motor breaks an over voltage by energy return appears, which could destroy the power supply and Speed Controller. Never connect Speed Controllers or other propulsion components directly to the 230 V / AC current.

In any case keep your body and any other objects away from the path of a propeller or other spinning motor parts, which is connected to a power battery. Never lean over a running system. Care about that no parts can come in touch with spinning drive parts; they could be thrown into your face, and could also weaken propeller and drive, causing mechanical or electric failures. Protect yourselves against any dangers coming from propellers and helicopter rotors. Keep anybody, especially small children, who can be hurt when the engine is running, at least 20 feet away.

Protect the Speed Controller against any vibrations, dust, wet, hits or pressures. Check Speed Controller regularly on damages. Should the electronic device have become wet, only reuse it again after doing a longer drying phase and an exact examination! Also Speed Controller has to be completely checked after any model crash. **Never use a damaged MASTER-Speed Controller**. If you want to use it farther, send the device immediately to Hacker repair service.

We defend any changes or modifications on the Speed Controller and his equipment. This is also considered for the battery connecting leads which have not to be extended. The battery wiring has to be as short as possible; they do not have to be longer than 15 cm. For these reasons a current measurement has to be done only with a pliers ammeter. Any measurement with an inserted ammeter (resistance) can cause destruction of the Speed Controller. The lengths of the engine power wires are not critical that much, but they also should be as short as possible. Long wires should be twisted because of an otherwise possible receiving disturbance.

Use device only by outside temperatures between -10°C up to +50°C. Therefore always provide for a good Speed Controller cooling. Speed Controller operations are only permitted in no electrostatic surroundings, where no loading can come true.

MASTER-Speed Controllers are not protected against polarity reversions; **therefore you must be sure that polarity is correct when connecting the Speed Controller.** If connection is wrong way round it would cause destruction of the device. If you want to reverse the motor rotation, bench test the motor connections noting the rotation of the motor. To change the rotation of the motor, simply swap any two motor wires connections or do it by programming. Never reverse battery connecting leads. Never connect power battery wires directly to the engine ones. This also can cause destruction of the device.

Never separate the battery from the Speed Controller when motor is running. This can cause high current drains which can cause device destruction. Some Speed Controller BEC types are fitted out with a switch. **ATTENTION:** This **switch does not disconnect**, the power batteries, from the Speed Controller. A low residual current flows even if the switch position is OFF (AUS), this will cause deep under loading especially by Lion/LiPo-Cells applications! Therefore connect the batteries to the Speed Controller a few seconds before operating, and disconnect them immediately after the end of the run.

Never connect a receiver battery in parallel when using a BEC device. This will cause destruction of the BEC unit! If you want to get a separate receiver battery by BEC type Speed Controller use, than disconnect and take out the red wire from the receiver-lead. The universal connecting system, used by us, can be dislocated easily. Use a knife blade to lift the retention tabs on the connector plug to remove the red wire. The free connector has to be insulated with a bit of electrical tape. Like this the BEC unit is out of service and a receiver battery can be connected without any danger. To know the permissible BEC load, which depends of the cells number of the battery pack and Speed Controller type, check on "***BEC capacities list A-2***" below! Attention digital Micro servos get a very high current drain, that means that the indicated number of Servos has, if necessary, to be decreased.

Mount your radio equipment, especially the receiver with his antenna, as far as possible from Speed Controller, batteries and motor. Otherwise, high current magnetic fields could affect the receiving quality. Always do a range test with low speed running motor, to make sure the perfect receiving function of your model.

For any connection you should use exclusively gold contact plugs and sockets which must be soldered perfectly to the wires. Never use strip connectors, crimp connectors or similar. For safety reasons always use identical products from the same manufacturer. This will minimize connection problems for example by battery changing. We recommend to use connectors, plugs and sockets from our accessories assortment.

Connect Speed Controller lead into the throttle channel on your receiver. Don't operate Speed Controller by a servo tester, because it could happened that motor will do some short starts in reason of some incorrect "throttle impulses". For this we strongly recommend, for any Speed Controller application an exclusive receiver use. We also recommend to only using receivers from relevant manufactories!

MASTER Speed Controllers are equipped with some extensive protection devices, which can only protect when operating in a "normal" range. For example if you get a motor winding or a wire short cut or something similar, Speed Controller could be damaged or destroyed. This is why you always have to control, on perfect functioning, all wires and connectors. Also a blocking of a small motor, which is operated by a maladjusted very efficient Speed Controller, does not necessarily leads enough to switch off the current. Reason is that blocking current is not high enough, therefore always use motors with matched Speed Controllers.

MASTER-Speed Controllers are delivered with right setup for Hacker-Brushless motors. Airplane Speed Controllers are delivered with activated brake. You will find in these manual appropriated settings for other motors.

Warning! High power motor systems can be very dangerous! High currents can heat wires and batteries, causing fires and burning skin. Follow the wiring directions carefully! Models equipped with high power motors can kill. Always fly at a sanctioned field. Never fly over or near spectators. Even though this Speed Controller is equipped with a safety arming program, you should still use caution when connecting the power battery.

2. Limitation of liability

In that Hacker Motor GmbH has no control over the correct use, installation, application, as well as the Speed Controller maintenance, no liability shall be assumed nor accepted for any damages, losses or costs resulting from the use of the product. Any claims arising from the operating, failure or malfunctioning etc. will be avoided. Hacker Motor GmbH assumes no liability for personal injury, property damage or consequential damages resulting from our delivery or our workmanship. As far as is legally admitted, with which legal arguments ever, the obligation to the compensation is limited to the invoice amount of the affected product. This does not apply, as far as we must avouch unrestrictedly after compelling laws or for rough negligence.

3. Product description

MASTER-Speed Controllers are highly developed electronic devices, especially for Hacker-Brushless motor use. Various, comfortable, setting possibilities as well as different operating modes make these Speed Controllers also compatible to other brushless motors. Their compact dimensions make this Speed Controller a good choice also for small models.


Into all these different types, which are individually described below, you will found the correct Speed Controller for any purposed model application. Inside the MASTER-Speed Controller line there are some special types like for airplanes, helicopters, boats and car models. You will also find some contests "experts" like the one for Pylon racings F5D, F5F and F5B. You will find technical data for any Speed Controller type on data sheets below A-1 and A-2.

All Speed Controllers could be settet up by transmitter as well as with our new Master Prog-Box. The programming range possibilities by transmitters are identical to our previous MASTER-Speed Controller Line. By using the Prog-Box you will get the complete range of programming skills. Settings have to be programmed only one time. The Speed Controller stores Setup until the data wouldn't be changed, even if you disconnect the battery. Setup can be changed only by a new programming sequence.


You get an overview of total programming possibilities on added sheets below A-3 and A-4.

4. Connections and controls

4.1 MASTER-Flight /-F5 /-Acro /-Heli /-Navy Versions

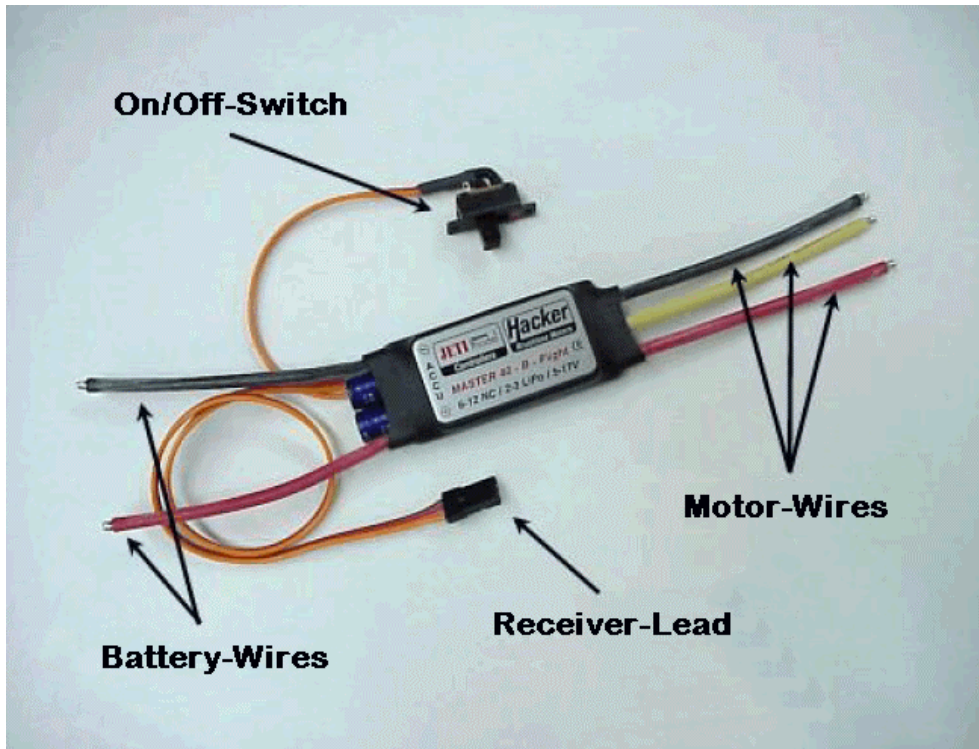

4.2 MASTER-Car Versions

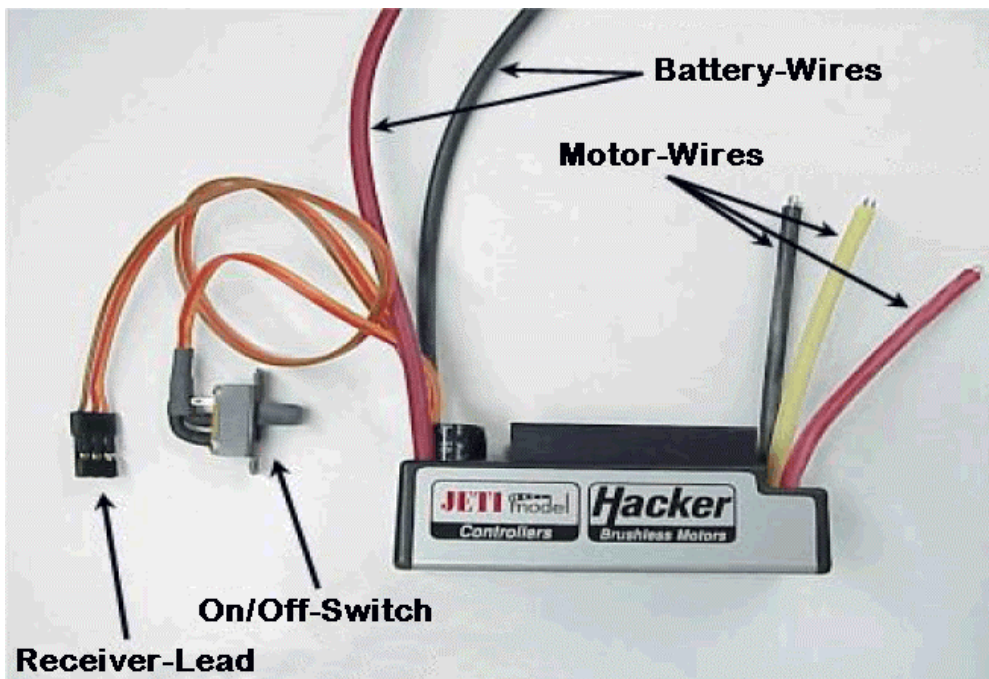

5. Initial Setup of MASTER-Speed Controllers

The initial operations, for all Speed Controllers' versions, are basically the same with very small differences. For a good overview we still described below the differences between initial operations for the different model types like for airplane-, helicopter-, ship- and car-models.

Basic conditions to start-up Speed Controller initial operations are that the motor is correctly mount into the model and that Speed Controller has been connected properly. Please consider your motor operating instructions. Connect Speed Controller receiver lead to receiver throttle channel. Please check anytime the total system to prevent malfunctioning, which can cause destruction of the Speed Controller.

5.1 **MASTER-Flight/-F5/-Acro Versions**

- Please care that your transmitter ATV adjustments, for both side of the Speed Controller throttle stick or knob, are 100%.
- When using Robbe/FUTABA transmitters, then your "throttle channel" has to be reversed!
- Move throttle stick into motor stop position first then turn on transmitter.
- Connect the power battery; avoid any repeating battery plug in and out.
- Turn on receiver, when operating Speed Controllers with BEC-System then turn on his switch. Both Controller *MASTER* 4B-Flight and *MASTER* 8B-Flight do not have switches, because of weight reasons. The turning on would be done by connecting the power battery.
- The motor will deliver a high tone signal (Beeping). After turning on, by activated brake, you will get only one "Beep". You will get two "Beeps", if brake has not been activated. Never move throttle stick/knob between turning on and the Beep(s). If the Beep sign does not sound, disconnect the power battery, then wait approx. 10 sec. and give it another try. After this, if "Beep" does not come, check following points below:
 - Is Speed Controller receiver lead correctly connected to the receiver?
 - Does the throttle stick/knob be into motor "OFF" position?
 - Is the power battery fully loaded and correctly connected?
 - Is receiver's power supply all right?

"Beeper" only sounds during the first turning on. If you turn off Speed Controller or receiver battery, without disconnecting the power battery, then there would be no signal (Beep) by switching on again.

- After Beep sign Speed Controller is armed and ready to operate. The "full power" setting would be programmed automatically. If you didn't have change (except Mode) initial Setup, then Speed Controller will work with factory setup, which means brake is activated, timing 1 (8 kHz), as well as automatically Low-Voltage cutoff for NiCad-/NiMh cells. This Setup would be the optimal one for operating with Hacker Brushless-Motors and is also recommended for 2-pole motors from other factories.

• 5.2 MASTER-Heli Versions

Please care! All MASTER-Heli Speed Controllers could be programmed in two different modes.

Mode 1 "standard" Speed Controller works in a normal way without brake (one "Beep" after turning on). This is Speed Controller's factory setup. When using this mode then connect Speed Controller receiver-lead to receiver's "throttle channel". In this case you need a transmitter setup with normal throttle curve. The motor spools up by soft start, run-up depend of helicopter can take up to 15 seconds. To deactivate soft start you have to pull back the throttle stick just a little bit and than to push it back up.

Tip: To avoid soft start, during flight, you have to push (after motor has running up) throttle trim lever forwards!

Mode 2 "governor" Speed Controller works with an active Speed regulation (double Beep after turning on). If this mode would be used then connect Speed Controller receiver-lead to a receiver "channel" which has to be free of any mixing function. For this, use a transmitter free knob or slider channel. In contrast to the standard Mode, you couldn't use the full range of speed, but only the meaningful range from 60-100% of full speed. If the lowest adjustable speed is still too high for a proper use, then change the pinion gear against a smaller one.

Tip: For testing out a new balanced or adjusted rotor system you should use Mode1 (standard), so that you can start in a low Speed range!

Before using Speed Controller for the very first time it is necessary to setup the needed Mode as well as the motor stop and full power positions. Therefore we described it below, and not in chapter "Mode Settings" (chapter 6.2).

- Please care that your transmitter ATV adjustments, for both side of the Speed Controller throttle stick or knob, are 100%.
- When using Robbe/FUTABA transmitters, then your "throttle channel"! has to be reversed
- Move throttle stick into full power position first, then turn on transmitter. Now when switching on the Speed Controller, programming sequence will start, Speed Controller will remain disarmed (motor will not run).
- Connect the power battery; avoid any repeating battery plug in and out.
- Turn on receiver, when operating Speed Controllers with BEC-System than turn on his switch.
- Controller does a four-tone sequence.
- **IMMEDIATELY** after the first melody move "throttle stick" into motor stop position.
- Speed Controller change Mode and signs it by a Beep(s) according to new Mode. ATTENTION: from now on Speed Controller is armed; any "throttle stick" moving will make motor starting!
- Then disconnect power battery and turn off receiver.
- This programming sequence, to change Speed Controller Mode, is repeatable anytime you want.
- This means that you must execute occurrence (described at the top) first time to get the Speed Controller operate into mode 2 (governor). To get the Speed Controller back into mode 1 (standard), execute this occurrence a second time.

For other initial operations you can go forward as usual:

- Move throttle stick into motor Stop position first, then turn on transmitter.
- Connect the power battery; avoid any repeating battery plug in and out.

- Switch on receiver, when operating Speed Controllers with BEC-System than use his switch.
- The motor will deliver a high tone signal (Beeping), which corresponds to operating mode.
- Speed Controller is ready after Beeping. If you didn't have change (except Mode) initial Setup, then Speed Controller will work with factory setup, which means brake is activated with timing 1 (8 kHz). This Setup would be the optimal one for operating with Hacker Brushless-Motors and is also recommended for 2-pole motors from other factories.
- Basically all *MASTER-Heli* Speed Controllers get a **Low-Voltage regulation** setup, which means Speed Controller reduce, depend on programmed tension, performance or Speed.

5.3 MASTER-Navy Versions

Please care!

MASTER-Navy Speed Controllers can be programmed to the special throttle setting need of "Pistol-Grip-Radios". For this it's necessary to setup the Controller into the used transmitter. Therefore we described it below, and not in chapter "Mode Settings" (chapter 6.2).

- Please care that your transmitter ATV adjustments, of the Speed Controller throttle stick or knob, are 100% for both side.
- When using Robbe/FUTABA transmitters then your "throttle channel" has to be reversed!
- Move throttle stick into full power position first, then turn on transmitter. Now when switching on the Speed Controller, programming sequence will start, motor will not run.
- Connect the power battery; avoid any repeating battery plug in and out.
- Turn on receiver, when operating Speed Controllers with BEC-System than use his switch.
- The Speed Controller recognizes "full power" setting and signs it by a melody.
- Move the throttle stick into motor "Stop" position.
- Speed Controller recognizes this position and signs it by a Beep.
- This programming is repeatable any time you want.

Settings would be stored, now Speed Controller knows the transmitter throttle settings. Disconnect power battery and switch off the receiving. For other initial operations you go forward as usual.

- Move throttle stick into motor Stop position first, then turn on transmitter.
- Connect the power battery; avoid any repeating battery plug in and out.
- Switch on receiver, when operating Speed Controllers with BEC-System, then use his switch.
- The motor will deliver two Beeps.
- Speed Controller is ready after Beeping. If you didn't have change (except Mode) initial Setup, then Speed Controller will work with factory setup, which means brake is activated with timing 1 (8 kHz). This Setup would be the optimal one for operating with Hacker Brushless-Motors and is also recommended for 2-pole motors from other factories.

5.4 MASTER-Car Versions

- Please care that your transmitter ATV adjustments, of the Speed Controller throttle stick or knob, are 100% for both side.
- Move throttle stick into center position (motor Stop) first, then switch on transmitter.
- Connect the power battery; avoid any repeating battery plug in and out.
- Turn on receiver, when operating Speed Controllers with BEC-System, then turn on his switch.
- The motor will deliver a high tone signal (Beeping). After turning on, by activated brake, you will get only one "Beep". You will get two "Beeps", if brake has not been activated. Never move throttle stick/knob between turning on and the Beep(s). If the Beep sign does not sound, disconnect the power battery, then wait approx. 10 sec. and give it another try. After this, if "Beep" does not comes check following points below:
 - Is Speed Controller receiver lead correctly connected to the receiver?
 - Does the throttle stick/knob be into motor "OFF" position?
 - Is the power battery fully loaded and connected correctly?
 - Is receiver's power supply all right?

"Beeper" only sounds during the first turning on. If you turn off Controller or receiver battery, without disconnecting the power battery, then there would be no signal "Beep" by switching on again.

- After Beep sign Speed Controller is armed and ready to operate. The "full power" setting would be programmed automatically. If you didn't have change (except Mode) initial Setup, then Speed Controller will work with factory setup, which means brake is activated, timing 1 (8 kHz), as well as automatically Low-Voltage cutoff for NiCad-/NiMh cells. This Setup would be the optimal one for operating with Hacker Brush-less-Motors and is also recommended for 2-pole motors from other factories.

6. Transmitter Setup of MASTER-Speed Controllers

6.1 Fundamental proceeding

The initial setup of all our different Speed Controller versions is basically the same. Therefore we described below the programming occurrences for all Speed Controller versions.

Make sure that for programming, the power battery (by non BEC Speed Controllers also the receiver battery) shows enough capacity. Also care, that your transmitter ATV adjustments of Speed Controller throttle stick are 100% for both sides. By Multiplex transmitter use care, that the impulse system has an "UNI" setup. If using Robbe/FUTABA transmitters, you have to reverse the throttle channel

Move throttle stick on full power position first, then turn on transmitter. Now, when switching on Speed Controller, programming sequence will start. This will be indicated acoustically by one four-tone melody (in contrast to a "Simple or Double Beep by normal operating). Besides, software guarantees, that motor does not start, even if the throttle stick would be in full power position. Each programmed setting would be motor signed by a melody. As the wished step sounds, move throttle stick into motor Stop position. The Speed Controller signs new mode setting by an associated sound signal and stores the constellation. Care about, that only one value can be programmed in a pass. For any new programming sequence (setting) the power battery has to be disconnected and re-connected. This programming is repeatable any time you want.

6.2 Mode Settings


Any of our Speed Controller versions has two different operating modes. In the airplane one, *MASTER-Flight/F5/Acro* line, the brake can be activated. This mode is normally used with motor-gliders and folding propellers. For airplane models usually the braking mode is not desired. The factory delivery would be with activated brake. When turning on a *MASTER-Flight/F5/Acro* Speed Controller mode would be indicated by a melody (simply or double Beep), one Beep stands for brake mode and two Beeps for No brake.

MASTER-Car Speed Controllers gets two different types of mode, one which has forward and brake, and an extended mode which get forward, brake and backwards. The factory delivery would be with forward and brake. When turning on a *MASTER-Car* Speed Controller mode would be indicated by a melody (simply or double Beep), one Beep stands for forward / brake mode and two Beeps for forward/brake/backwards.

The mode of a Navy Speed Controller could not be changed by throttle stick. Navy Speed Controller can be set up by standard or on a Pistol-Grip-Radio (see chapter 5.3).

Mode setting procedure as follows:

- Move throttle stick on full power position first, then turn on transmitter. Now when switching on the Speed Controller, programming sequence will start, motor will not run.
- Connect the power battery; avoid any repeating battery plug in and out.
- Switch on receiver, when operating Speed Controllers with BEC-System, then use his switch.
- Controller does, after approx. 5 sec., a four-tone melody, which signs that programming sequence is ready.
- **IMMEDIATLY** after the first melody move throttle stick into motor Stop position.
- Controller changes Mode and signs it by Beeping according to new Mode. **ATTENTION:** From now on Speed Controller is armed and any throttle stick moving will make motor starting!
- This programming is repeatable any time you want; any time Speed Controller's mode would be changed.

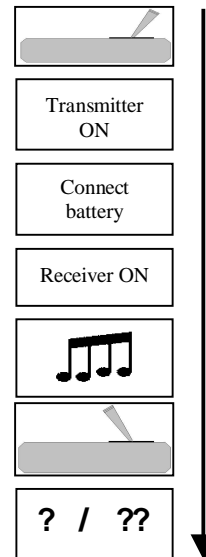

The settings would be stored, from now on Speed Controller works with programmed mode. Disconnect power battery and switch off the receiving. For other initial operations go forward as usual.

6.3 Timing settings


All MASTER-Speed Controllers get four different, by transmitter programmable, timing adjustments (motor ignition advance). By this way all our Speed Controllers can be adapted to different motor types. A "motor ignition advance" is necessary, because by the inductance of motor coils is the current increase temporally delayed. The timing is indicated in degrees. This means how far before, the real moment, the coils current will be turned on. Sharpener the timing is (higher the number of degrees), the more shifts the max. efficiency to higher current operating. The optimal timing is determined by the different motor types.

Timing setting procedure as follows:

- Move throttle stick on full power position first, then turn on transmitter. Now when switching on the Speed Controller, programming sequence will start, motor will not run.
- Connect the power battery; avoid any repeating battery plug in and out.
- Switch on receiver, when operating Speed Controllers with BEC-System then use his switch.
- Controller does, after approx. 5 sec., a four-tone melody, which signs, that programming sequence is ready.
- After again waiting 5 sec., the different timing steps would be indicated by melodies. You will get five times one to four tones. Consider following system:
 - Timing 1: five times one tone in a row
 - Timing 2: five times two tone in a row
 - Timing 3: five times three tone in a row
 - Timing 4: five times four tone in a row

While the wished step is indicated by the tone signal, move the "throttle stick" into motor stop position.

- Controller change Mode and signs it by tone signal according to new Mode. ATTENTION: From now on Controller is armed, and any "throttle stick" moving will make motor starting!

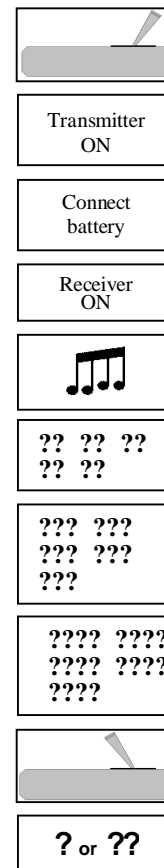

Timing settings would be stored, from now on Speed Controller works with programmed Timing. Disconnect power battery and switch off the receiving. For other settings go forward as usual.


MASTER-Speed Controllers are factory programmed on Timing 1, which means to get a 2° "ignition advance" setting. This is the most efficient one for HACKER Brushless motors. This setting is also recommended for 2-pole motors from other manufacturers. Timing 2 corresponds to an 8° setting. Timing 2 is a sharpener one for 2-pole motors and brings the best results for 4-pole motors. Timing 3 has 15° of "ignition advance" it's suitable for 8-pole motors. Timing 4 has 30° of "ignition advance" and it fits to 10-and more pole motors. To get the most efficient timing for your motor, please check the used motor manual.

6.4 Switch frequency settings (40-A types), Low-Voltage cutoff (30-A types) and reverse (except Navy- and Car types)

Brushless Speed Controller are working accordance with the PWM (Pulse With Modulation) switching rate principle. The switch frequency for this signal has to be a multiple one regarding to the commutation frequency. Frequencies of 8 kHz are generally considered as sufficient. Air coils motors need switch frequencies, because of their low inductance, up to 32 kHz. Starting from the *MASTER 40* the switch frequency can be changed in three steps. This made our Speed Controllers universally useable. The optimal switch frequency depends of the motor construction.

Switch frequency setting procedure as follows:

- Move throttle stick on full power position first, then switch on transmitter. Now when switching on the Speed Controller, programming sequence will start, motor will not run.
- Connect the power battery; avoid any repeating battery plug in and out.
- Switch on receiver, when operating Speed Controllers with BEC-System, then use his switch.
- Controller does, after approx. 5 sec., a four-tone melody, which signs, that programming sequence is ready.
- After waiting again 5 sec. the different timing steps would be indicated by melodies. You will get five times one to four tones. Leave throttle stick in "full power" position and wait.
- Then the three different frequencies would be melody indicated. They are given by long and short Beeps. Consider following system:
 - Frequency 1 (8KHz): long tones
 - Frequency 2 (16KHz): alternates long and short tones
 - Frequency 3 (32KHz): short tones
 - long, short, long Tone: reverse
- **While** the wished switch frequency is indicated by tone signal, move the throttle stick into motor Stop position.
- Sped Controller recognizes new frequency setting and signs it by a melody according to new Mode. ATTENTION: From now on Controller is armed, and any throttle stick moving will make motor starting!

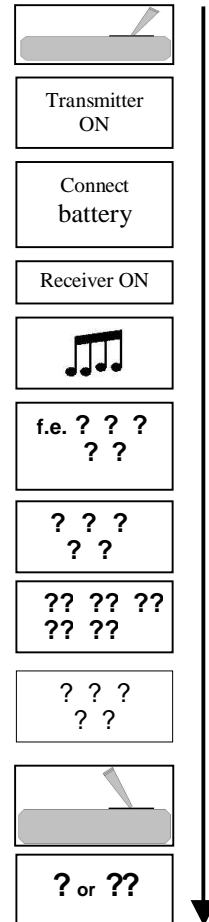

Frequency settings would be stored, from now on Speed Controller works with programmed frequency. Disconnect power battery and switch off the receiving. For other settings go forward as usual. *MASTER-Speed* Controllers are factory programmed on frequency 1, which means to get an 8 KHz setting. This is the most efficient one for HACKER Brushless motors. This setting is also recommended for 2-pole motors from other manufacturers. The second frequency corresponds to 16 KHz and the third to 32 KHz setting. To get the most efficient frequency for your motor, please check used motor manual.

MASTER-Speed Controllers which switch currents up to 30 A (*MASTER 4B-Flight* to *30B-Flight* as well as *MASTER 8B-Heli* as well as *MASTER B-Car mini*) purpose instead of a switch frequency a Low-Voltage cutoff. Like this you are also able to program these Speed Controllers by transmitter for Lithium Polymer cell applications. The setting method is completely identical to the switch frequency one. Besides, assigned to the acoustic signals are following Low-Voltage cutoff values/Options.


- Long tones: 33% of battery tension while connecting, at least with 4 V (for NiCd / NiMh).
- Long and short tones: cutoff with approx. 6.0 V (for 2 Lithium polymer cells).
- Short tones: cutoff with approx. 9.0 V (for 3 Lithium polymer cells).
- Long, short, long tone: reverse.

6.5 Current limitation setting of Car Speed Controllers

MASTER-Car Speed Controllers get a four step programmable current limiter (20 A, 40 A, 60 A and without limitation). The limiter protect, while blocking the wheels, Speed Controller and motor.

Current limiter programming procedure as follows:

- Move throttle stick on full brake position first, then turn on transmitter. Now when switching on the Speed Controller, programming sequence will start.
- Connect the power battery; avoid any repeating battery plug in and out.
- Switch on receiver, when operating Speed Controllers with BEC-System then use his switch.
- Speed Controller does, after approx. 5 sec., a melody, which signs, that programming sequence is ready.
- Then the four limiter Steps are systematically indicated by Beeps, by approx. 20 A -> current limitation one Beep, by approx. 40 A -> current limitation two Beeps, by approx. 60 A -> current limitation three Beeps, no limitation -> are indicated by four Beeps.
- **While** the wished switch frequency signal sounds, move the "throttle stick" into motor Stop position.
- Speed Controller recognizes new setting and signs it by a melody according to new Mode. ATTENTION: From now on Speed Controller is armed, and any throttle stick moving will make motor starting!

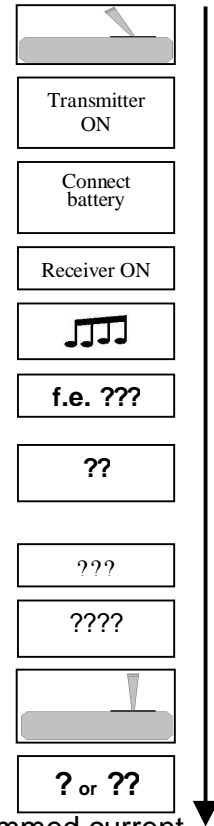


Settings would be stored, from now on Speed Controller works with programmed current limitation. For other settings go forward as usual.

7. MASTER-Speed Controller Setup by Prog-Box

All third generation MASTER-Speed Controllers can be programmed, in addition to the transmitter programming, by an independent Prog-Box (programming box).

Herewith Speed Controller Setup can be programmed easily, see appendix A-3 (Setup features).

How to connect the Prog-Box, please, check illustration below:

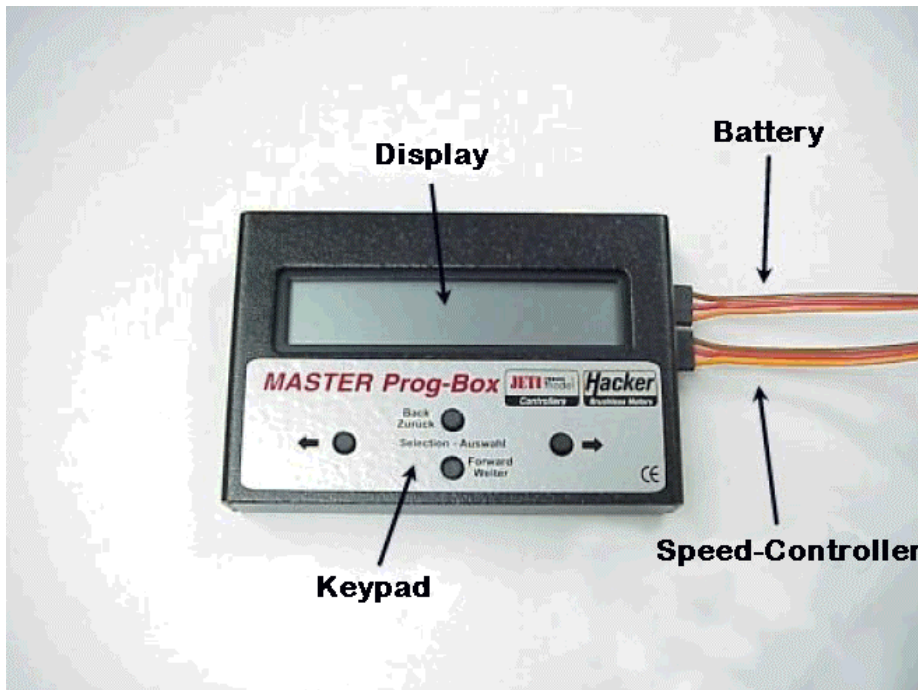

MASTER Prog-Box is not contained in Speed Controller supply.

Please check, how to use, on manual, which is added in the MASTER Prog-Box supply.

8. Declaration of conformity

The described products are in compliance with the relevant and applicable EC guidelines for electromagnetic compatibility:

89/336/EWG
92/31/EWG
93/68/EWG

9. Protection features

MASTER-Speed Controllers are fitted out with a couple of monitoring devices, which has to protect the Speed Controller as well as to care about the proper use of reception signals. The protection functions guarantee the correct functioning of Speed Controller and motor in the whole Speed and current area. But they can't protect against inadmissible handling and operating conditions like for example short cuts or a polarity reverse of power battery.

The Speed Controller protections switch the motor off if:

- Speed Controller gets overloaded when operating or if he reaches a temperature from 110°C. However, this does not protect against short cuts.
- The battery tension gets down under the minimal operating voltage of the respective type.
- The current drain, strongly distinguish in different phases (asymmetrical load). Speed Controllers do not get a current monitoring. The protection is only made by temperature monitoring
- If no valid receiver signal for more than 1 sec. Besides, Speed Controllers processor checks the input after a logical mathematic procedure. As the correct impulses comes back again, motor would be restarted.

10. Warranty

Any Speed Controllers wear during production through several tests. We lay a special priority into high quality products. Therefore we provide 24 months warranty to our Controllers.

The warranty consists, during the guarantee time, in a free of charge repair service for proved material defects. We reserve device changing, if repair is impossible for economic reasons.

As voucher for beginning and expiration of the warranty serves invoice issued by product acquisition. Possible repairs do not extend the warranty period. Incorrect application or operations, e.g., by polarity reverse, over voltage or wetness, avoid warranty claims. This is also considered for faults based on strong wear or excessive vibrations. Further claims, for example secondary damages, are expelled. The liability for losses by the device or its application is also expelled.

Any shipping to Hacker Motor GmbH must be free of charge; unfree shipping will not be accepted. We can not take any responsibility for transport damages or loss of your shipment.

For any warranty recover following conditions must be fulfilled:

- Add invoice for Speed Controller purchase into the package
- The Speed Controller has to be used in accordance with its operating instructions
- The Speed Controller has to be used in accordance to the tensions and currents range indicated by the technical data
- Add an indication which exactly describes the problem or defect.