


9.Receiver and server connectivity

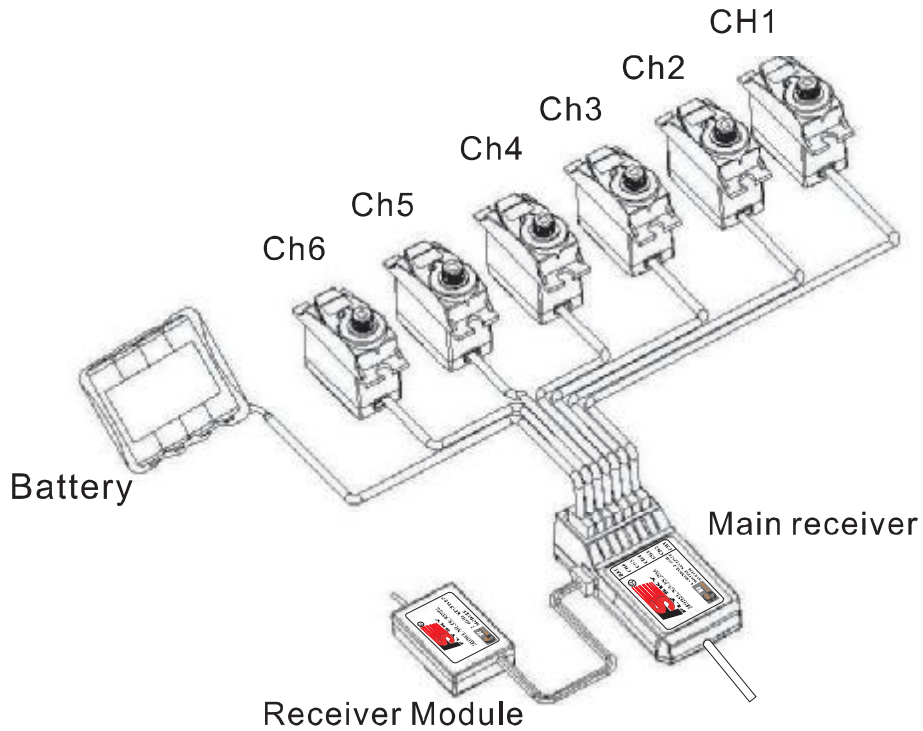

When installing the receiver please make sure that two items showed 90 degree angle.

