

canale	Stick tot	Stick min (basso o sinistra)	Stick centro	Stick max Alto o Destra	Trim tot	Trim min	Trim centro	Trim max
1	4.77	1.85	2.41	2.97	9.19	3.53	4.83	5.94
2	5.10	2.00	2.59	3.20	8.82	3.41	4.61	5.83
3	5.18	2.02	2.62	3.24	8.56	3.29	4.47	5.56
4	4.93	1.93	2.48	3.10	8.63	3.34	4.54	5.64