



Spar joint doublers (top and bot)
Make 2 from 1/32" ply
1" x 0.75"




0.157" carbon tube spars



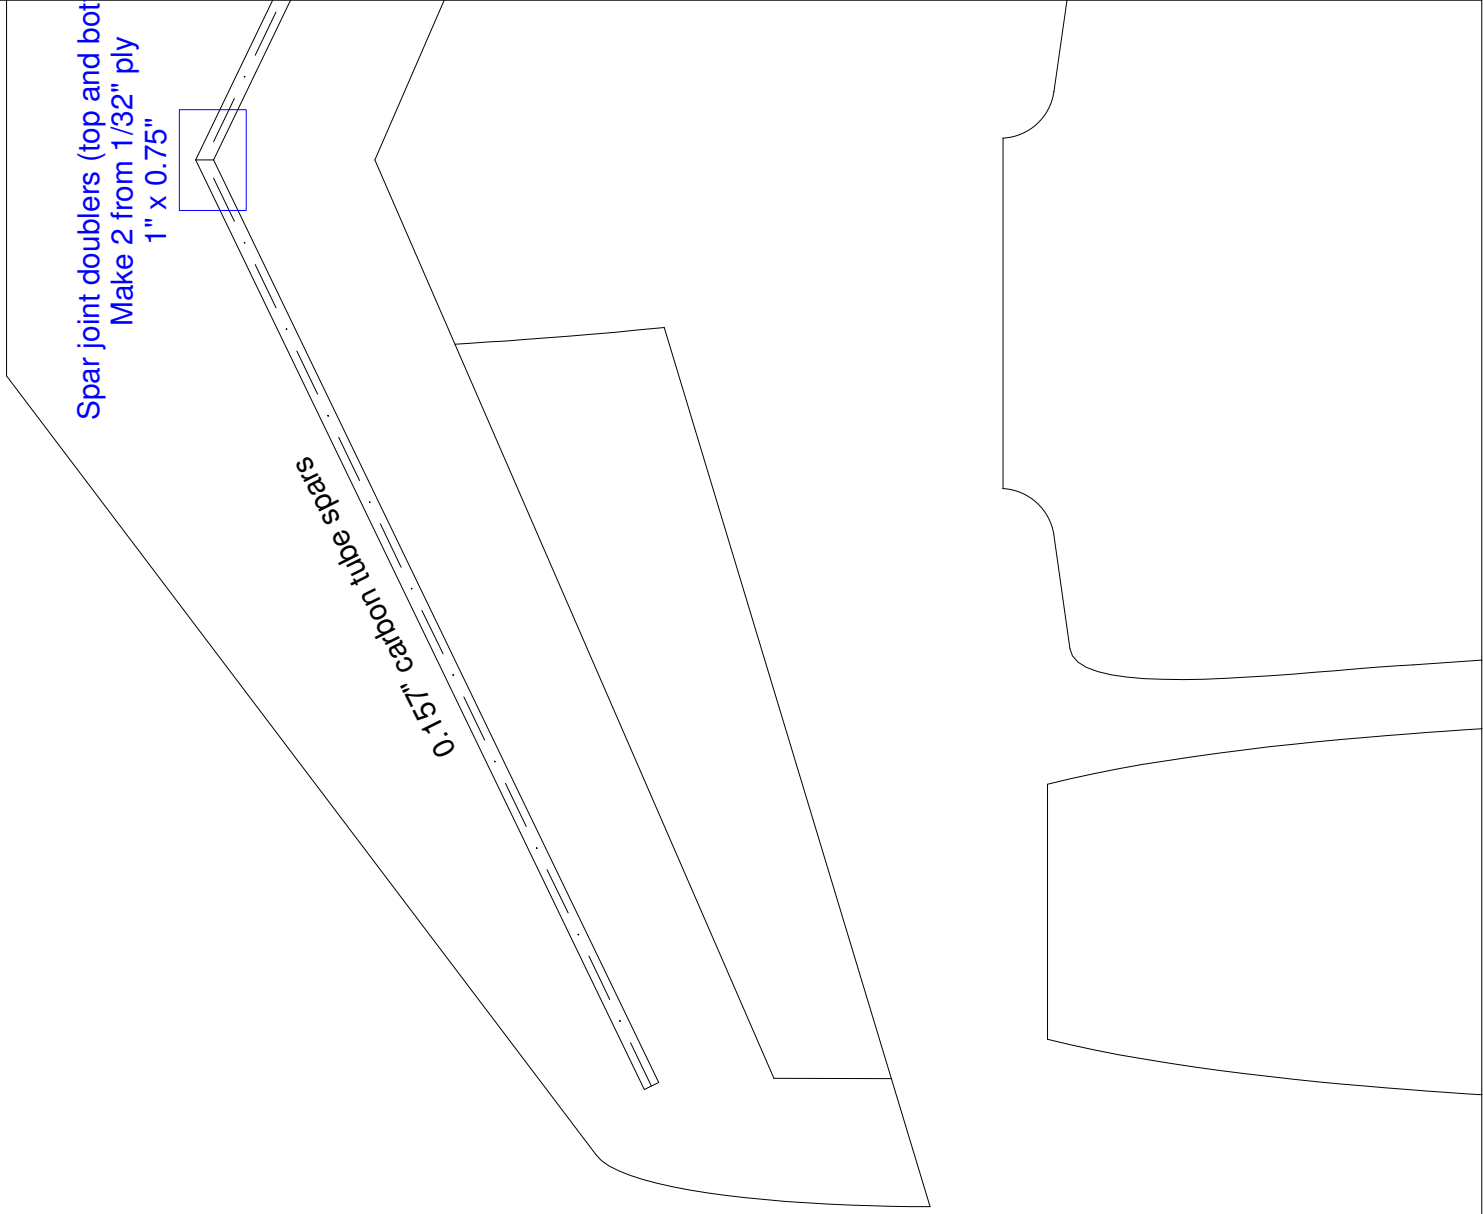


Fuselage/inlet top
Make 1

Fuselage/inlet
Make 1

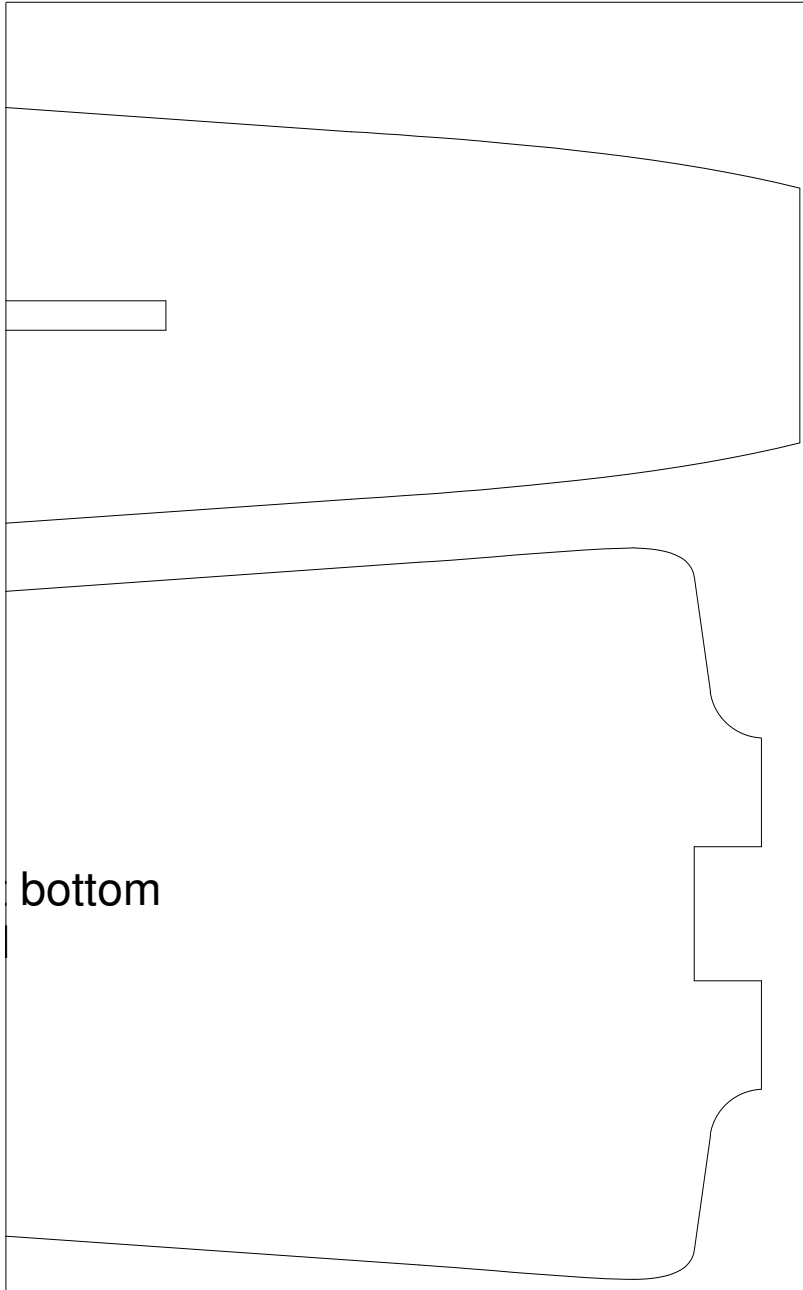

bottom

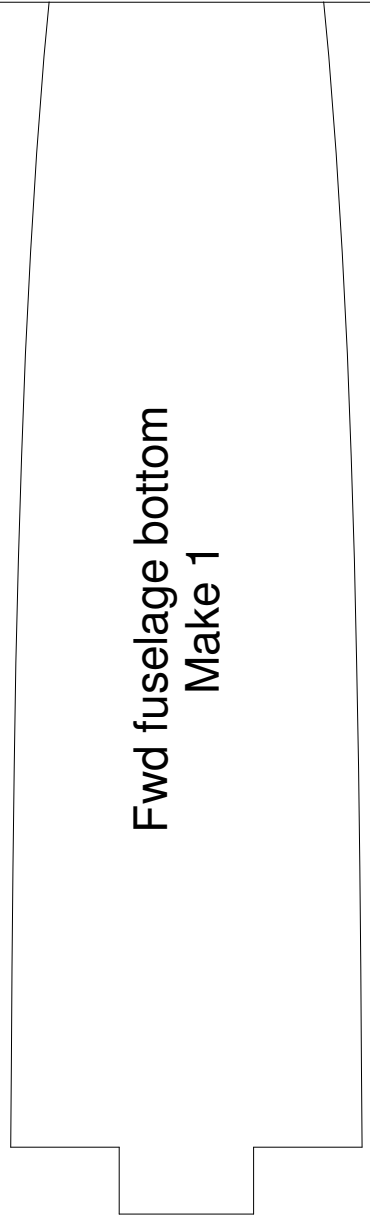


Fwd fuselage bottom
Make 1

Bulkhead F-3
Make 1

Bulkhead F-2
Make 1

Bulkhead F-1
Make 1

Wing root fillets
Make 2

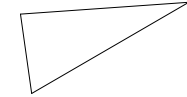

Horizontal tail
Make 1

tom)


Fwd Fuselage Top
Make 1

Canopy sill

3/8" wide foam strip

F-2

F-1

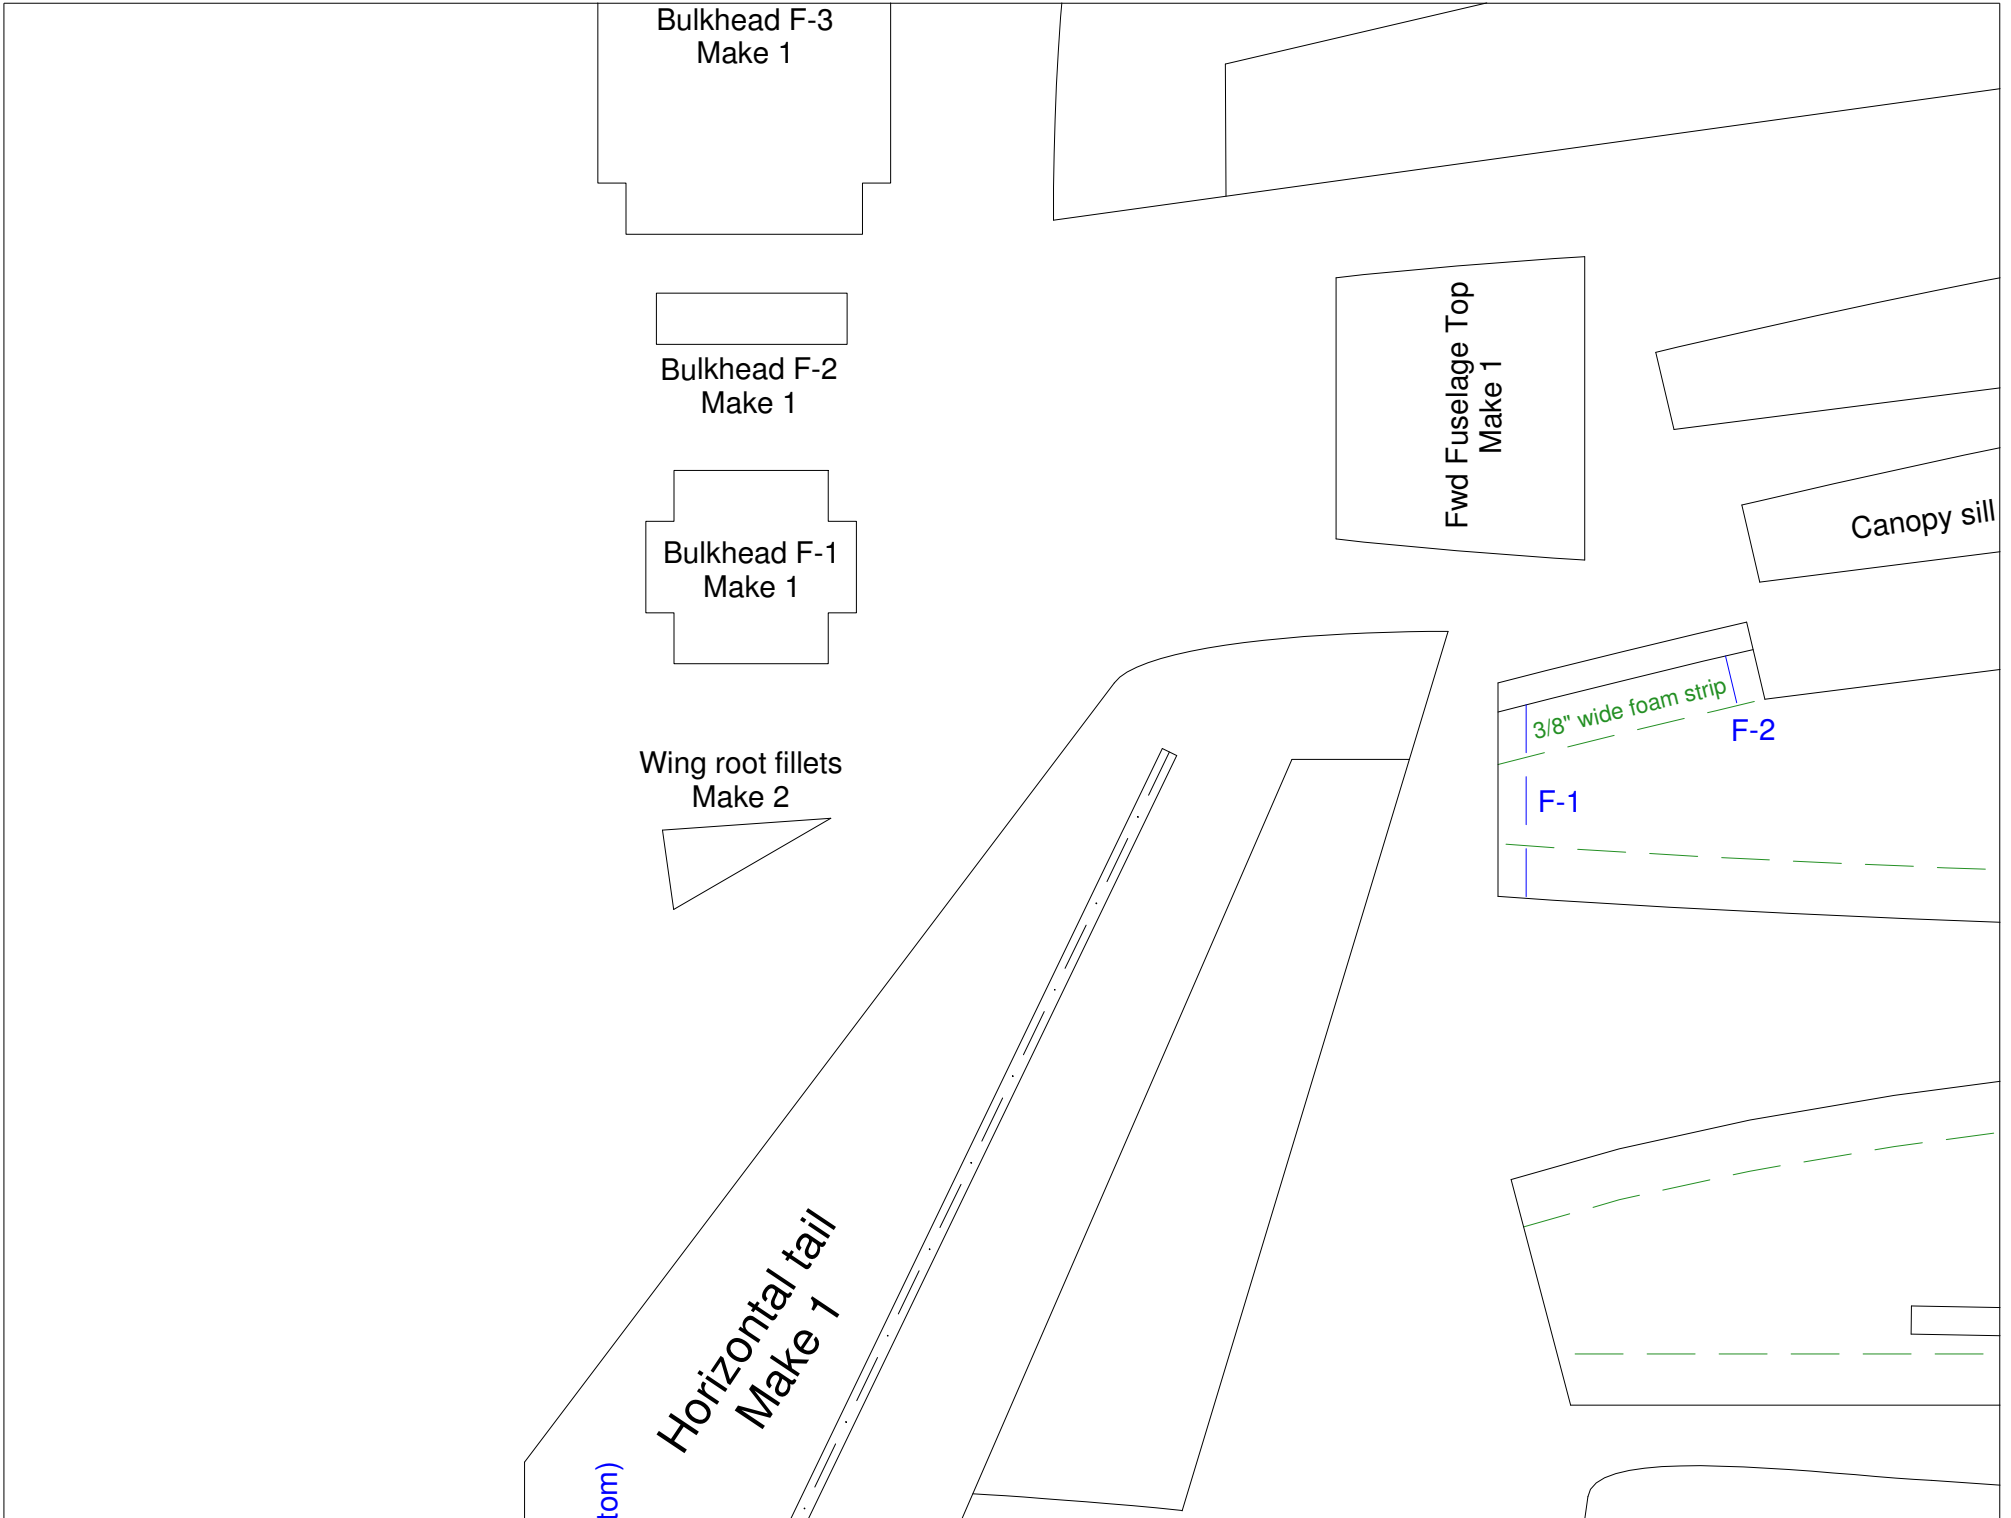

Canopy
(make 10 and
laminated together)

Turtle deck top
Make 1

piece - Make 2

3/8" wide foam strip

Fwd Fuselage Sides
Make 2

Motc
M


F-3

3/8" wide foam strip

3/8" wide foam strip

Fuselage/Inlet Sides
Make 2

3/8" wide foam strip

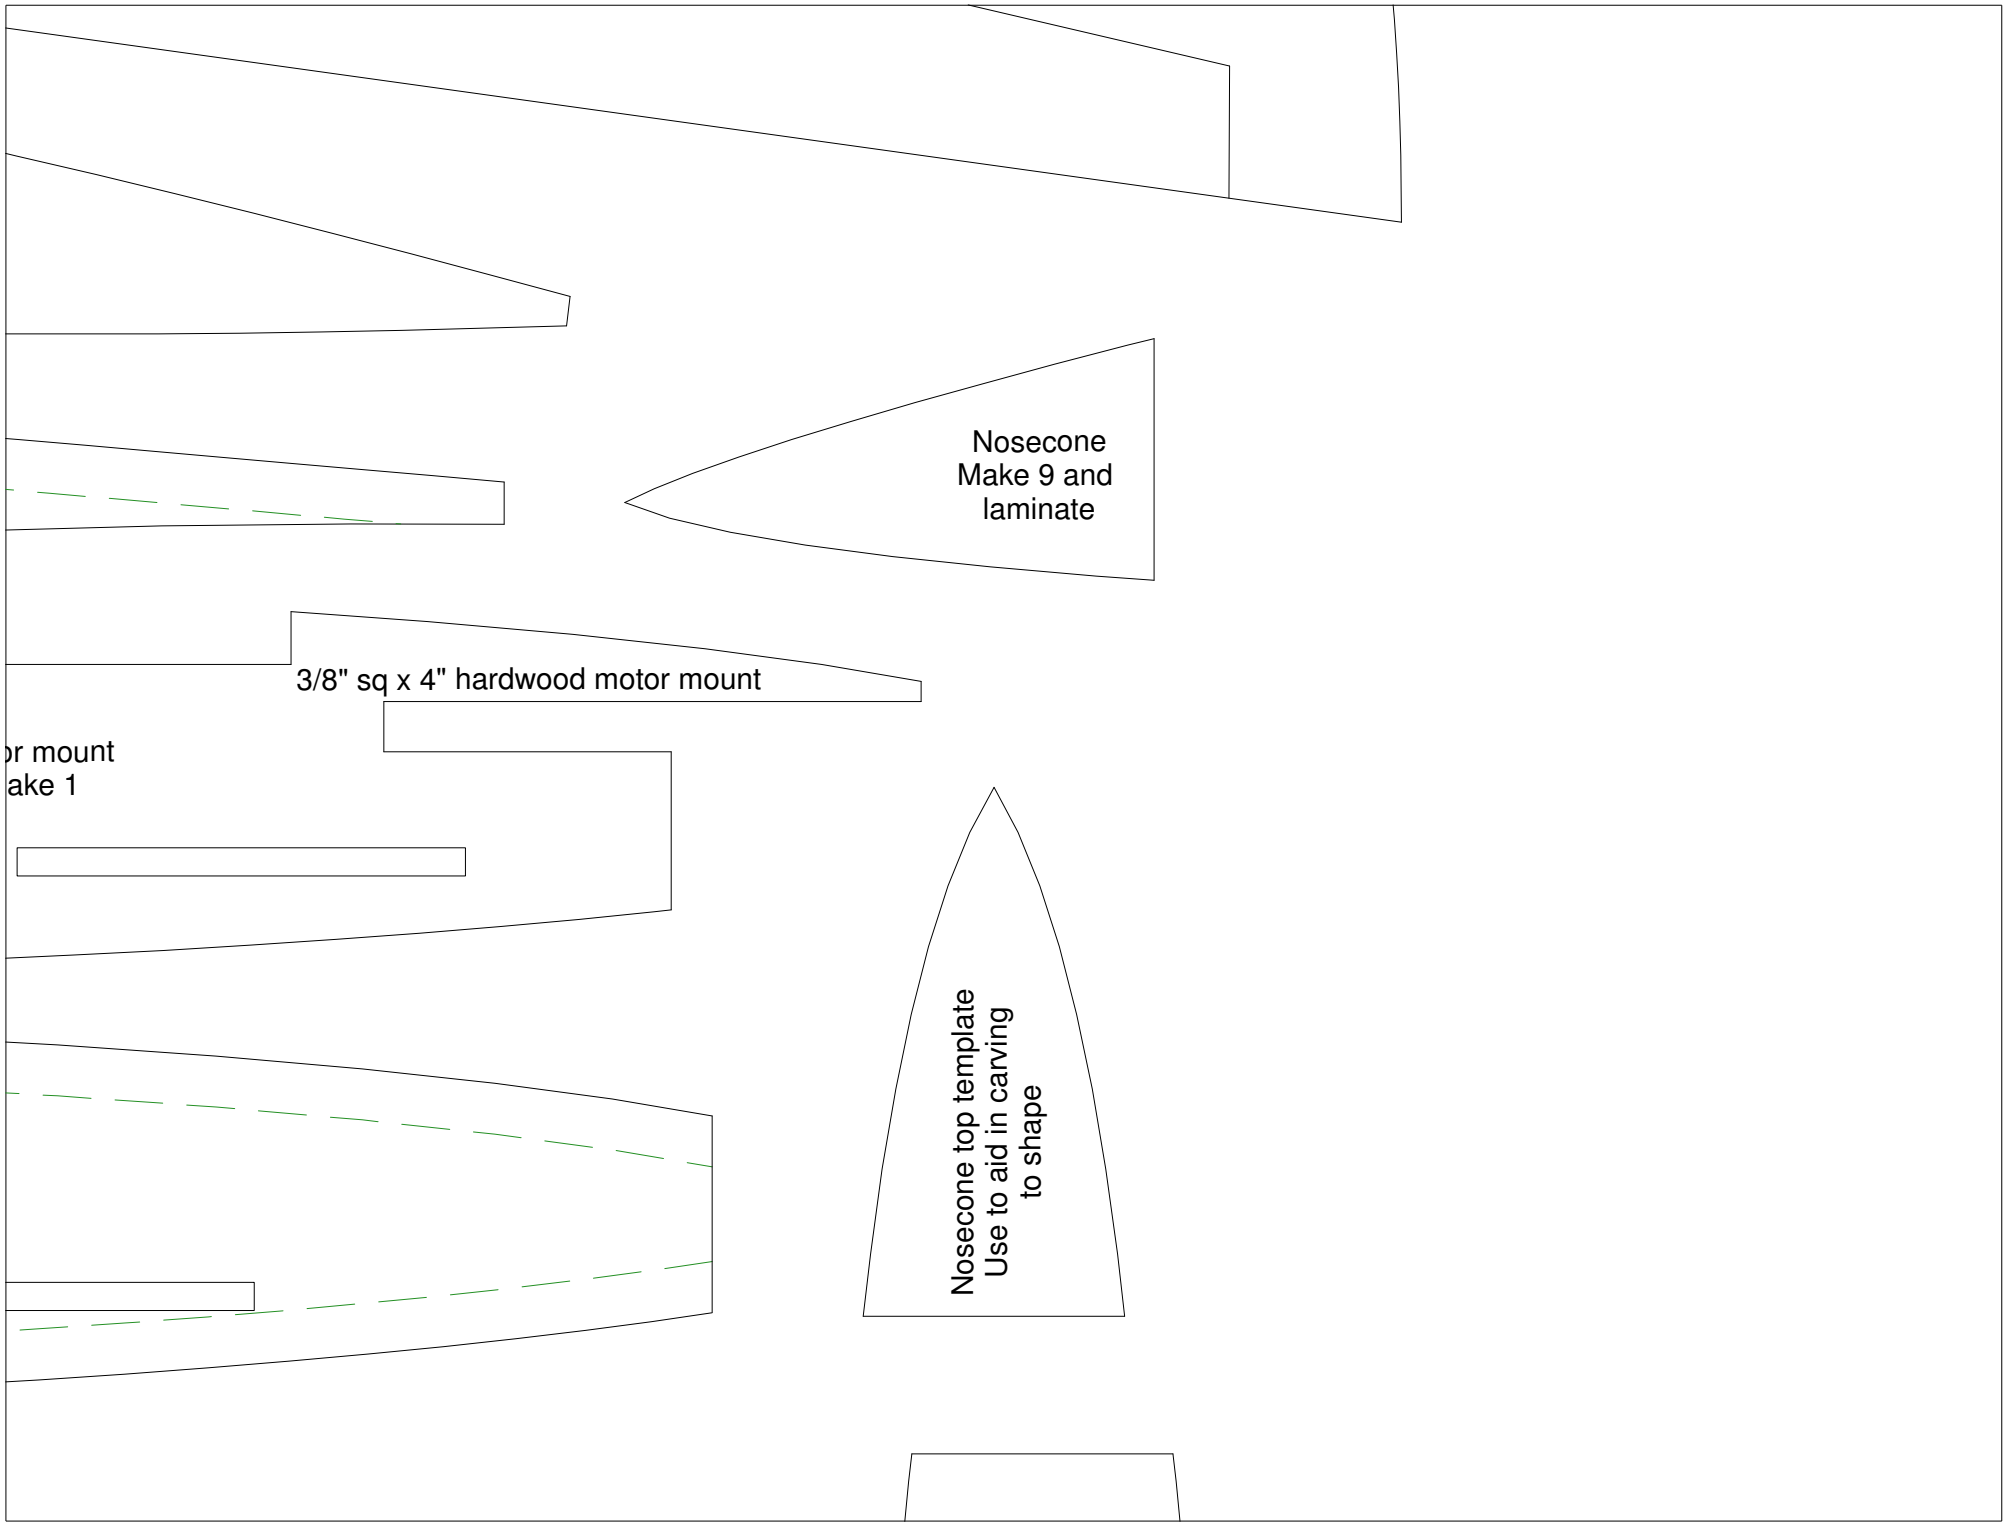


Nosecone
Make 9 and
laminate

3/8" sq x 4" hardwood motor mount

or mount
take 1

Nosecone top template
Use to aid in carving
to shape

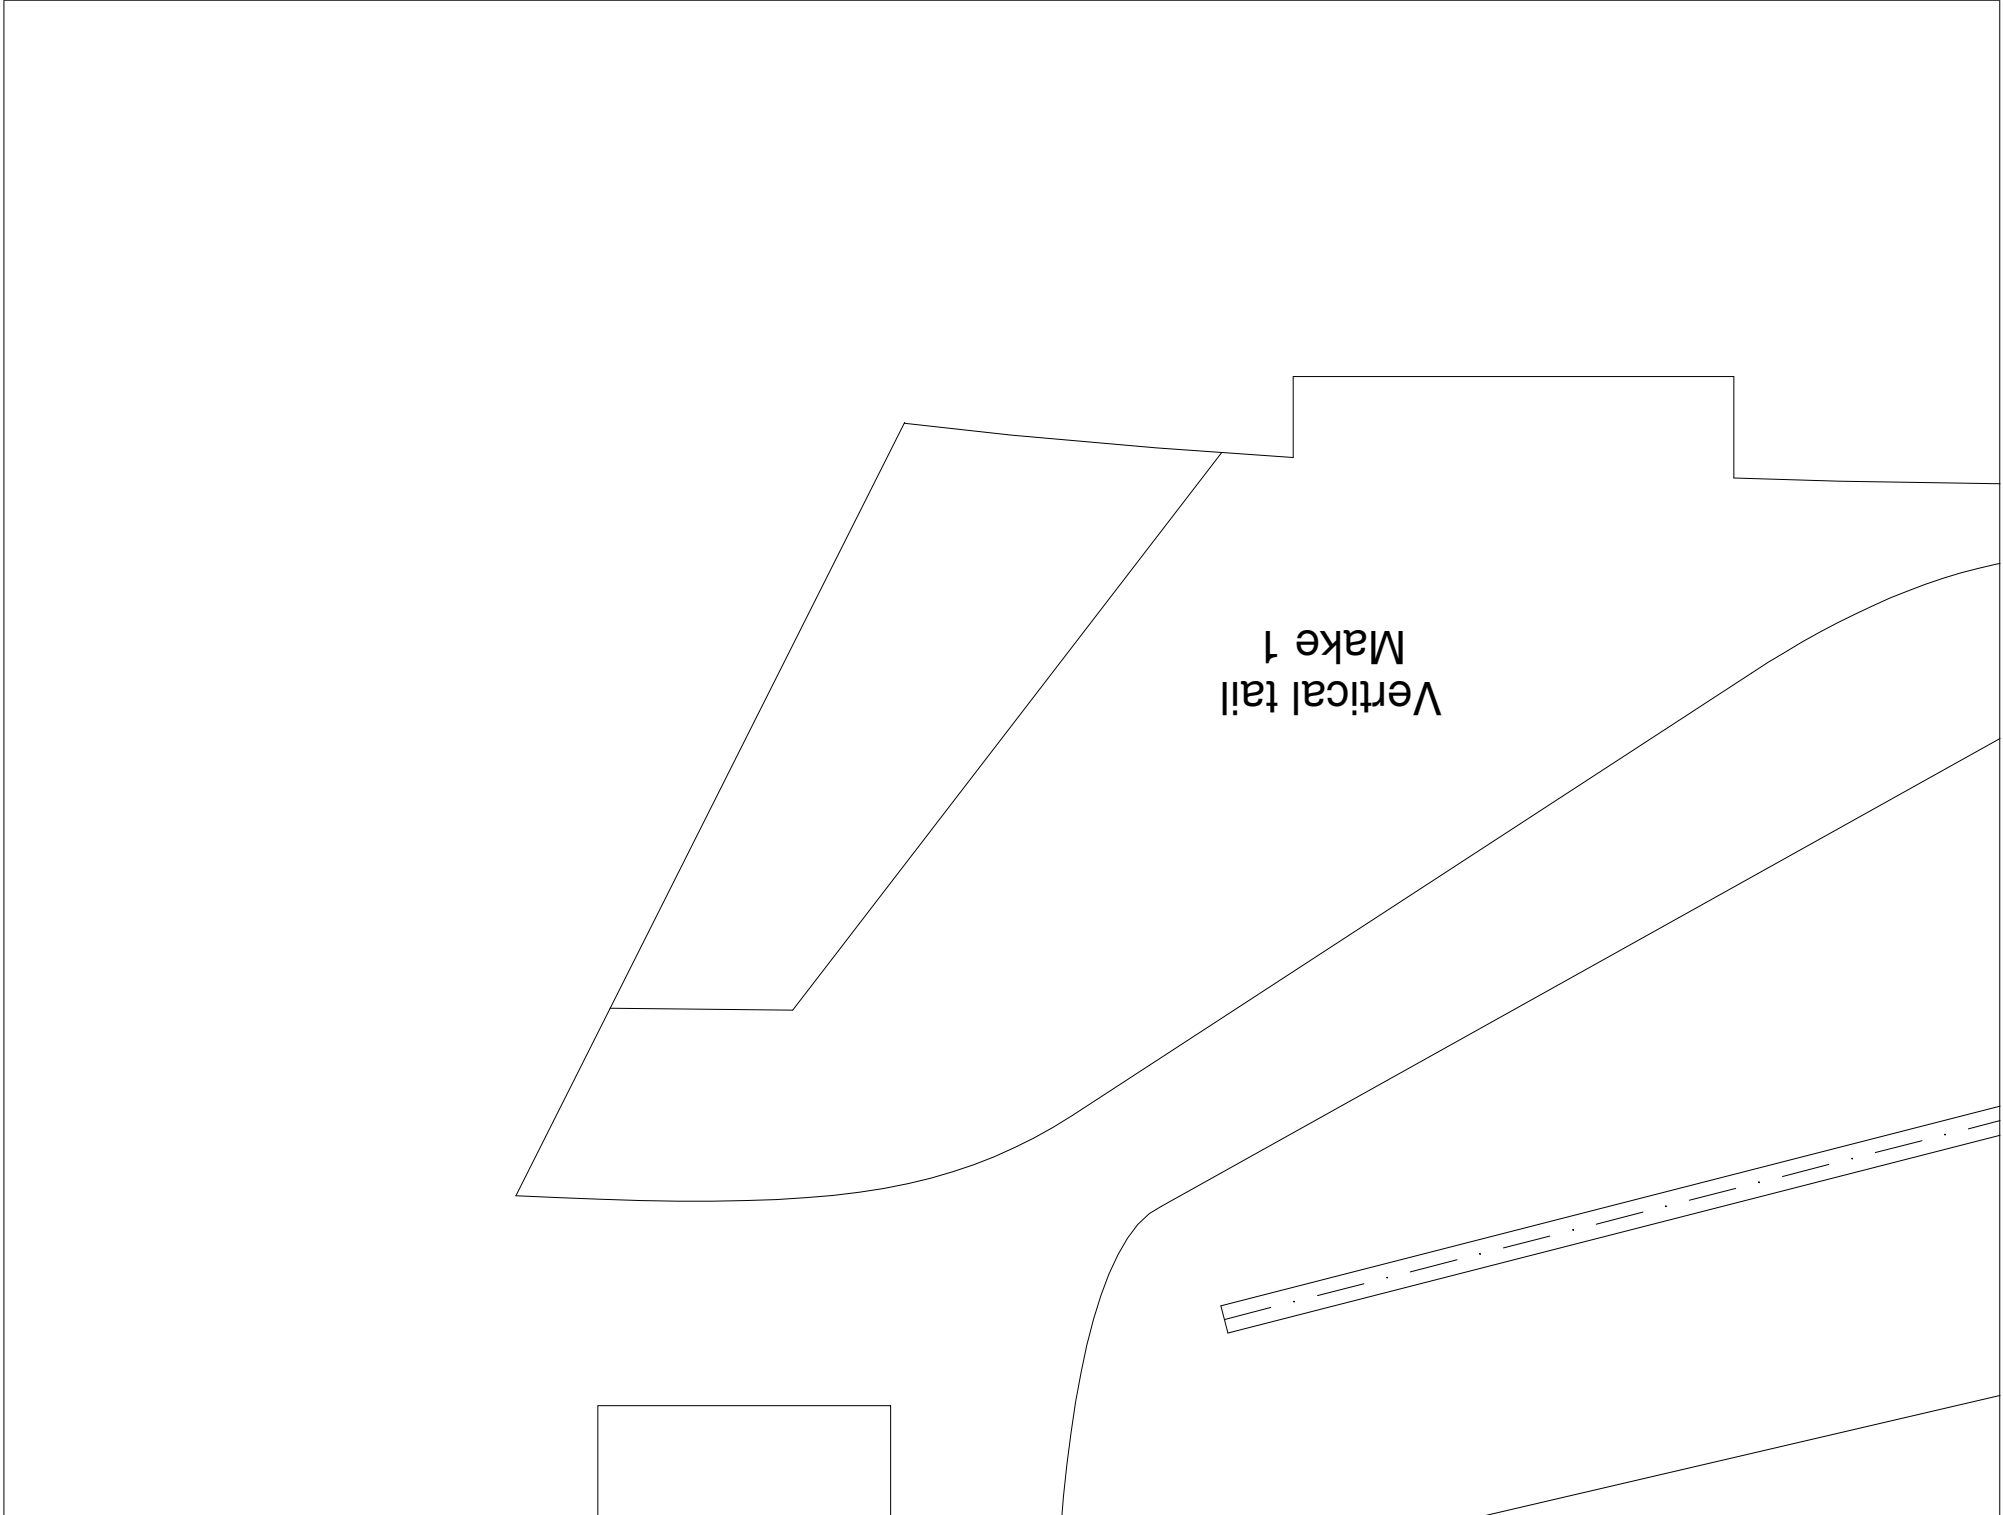


Vertical tail
Make 1



Wing
Make 1

70% SC

Spar joint doublers (top and bottom)
Make 2 from 1/32" ply
1" x 0.75"

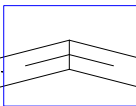

0.21" carbon

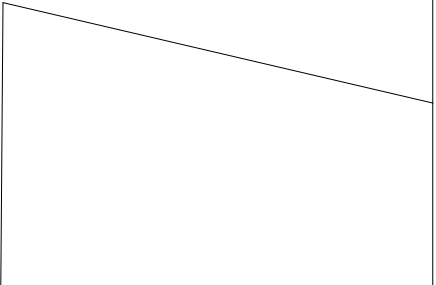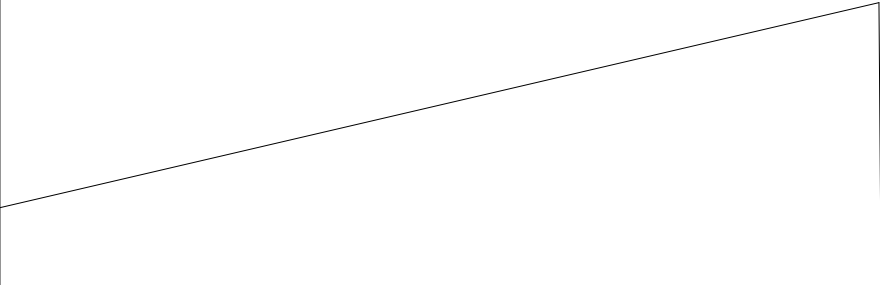

Super Bandit Park Jet

Designed by Steve Shumate

Copyright © 2005 All Rights Reserved

All parts made from 6 mm Depron or
BlueCore foam unless otherwise specified

SCALED VERSION

tube spars

