


Nose weight  
2 EURO

Middle fuselage part, 1#req., depron 3 mm

wrap perimeter of the front  
fuselage side with clear  
adhesive tape for more durability.


Side fuselage part, 2#req., depron 3mm

C.G. location

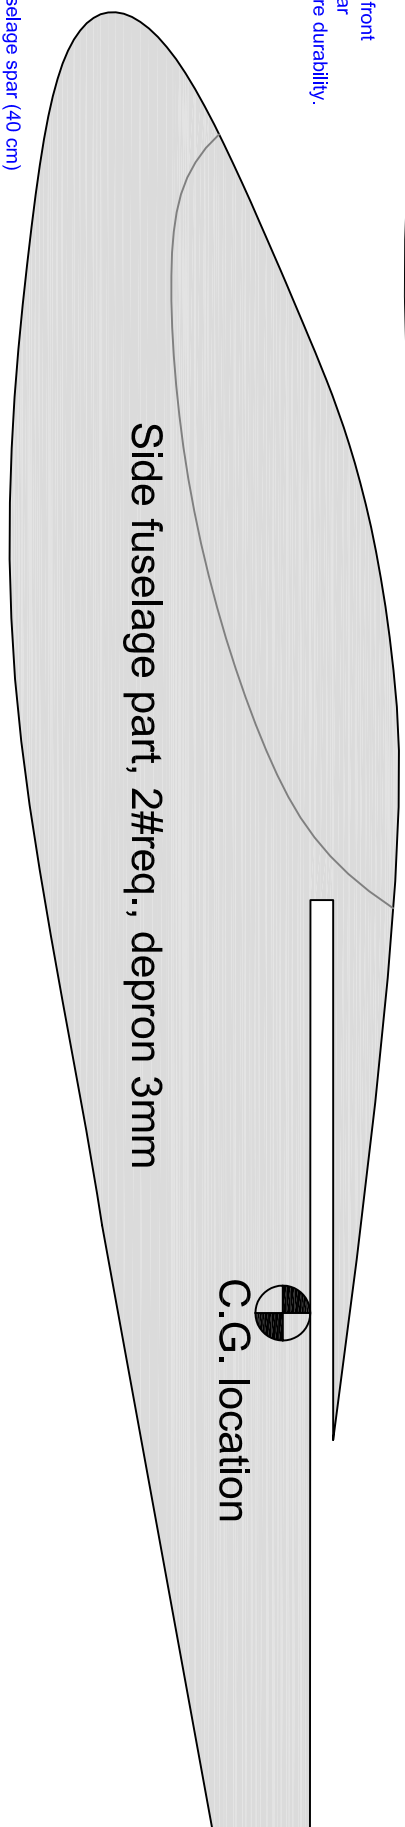

fuselage spar (40 cm)


slight bend up



side part

middle part

middle part

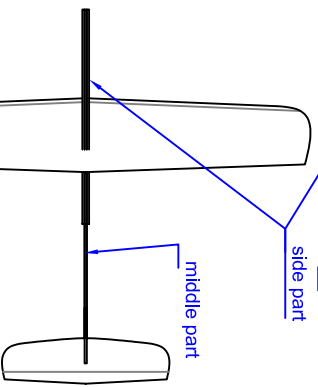


wing spar (~28,5 cm)



You will need also:

- spruce spar 3x5mm
- 2# length 28,5 cm (wing leading edge)
- 1# length 40 cm (fuselage)

Fin, 1#req., depron 3 mm

Forward



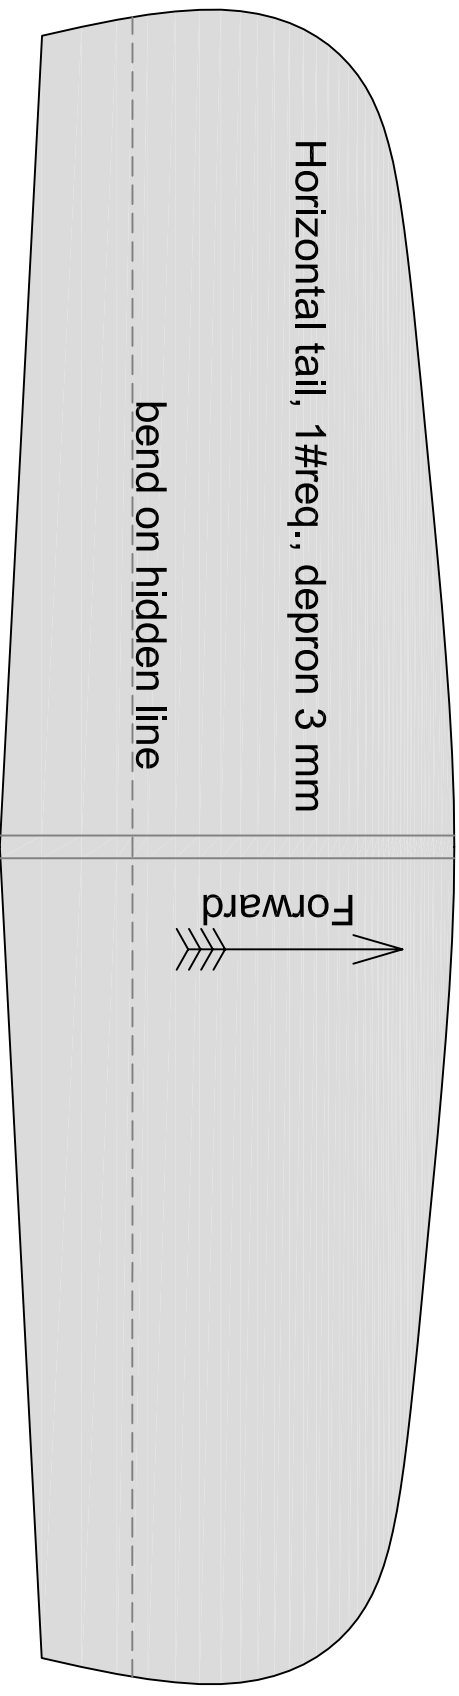

Spruce spar 3x5 mm cross section goes on this edge!

Wing half, 2#req., depron 3 mm

