


# Slow Combat One Design Fuselage

2 layers of 1/4" blue foam

Motor should be as close to in-line with wing as possible

Back of motor bell to leading edge of wing is 6" to 7"

Front of fuselage reinforced with 1/16" Aircraft Ply laminated to outside

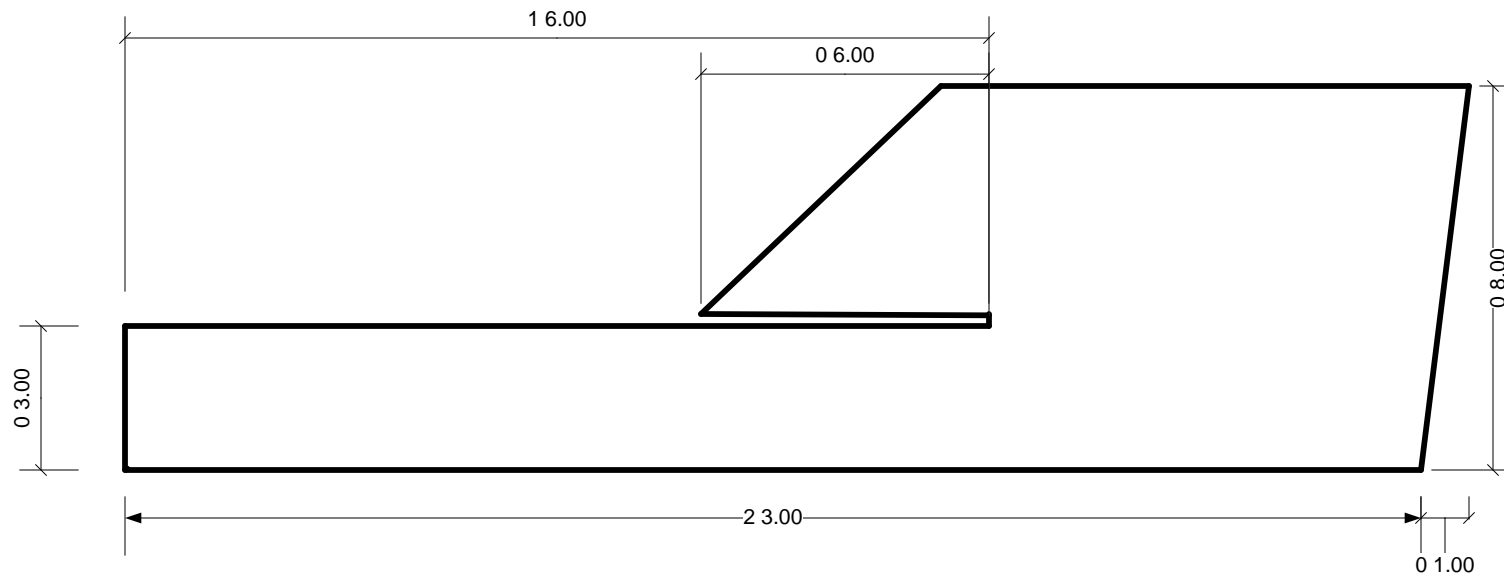

All dimensions in inches  
Scale 1"=4"

5/11/2011