

Remove after sanding

Top View of Starboard (Right) Wing

Light Balsa


Tailboom Position

Front Profile Line

Rear Profile Line

Wing Tip Balsa

10mm Under E

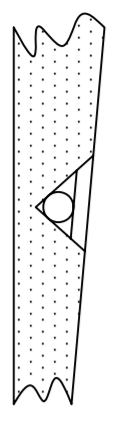

Cut out a slot to hold the aileron torque rod and infill with scrap balsa. (Enlarged View)

1/16" sq Torque Rod

Cut Out Ailerons After Sanding

Wing 1/4" Light Balsa Sheet

